



# Strideways®

## Strideways PRO CO2 Splitter Instruction Manual

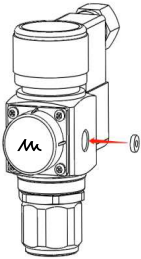


01

Place the small white seal gasket into the regulator outlet and put it flat on the bottom;

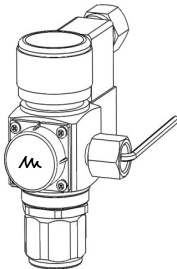

02


Install the swivel joint to the regulator outlet and screw it tight by using the provided S3 hex tool to ensure no leakage.

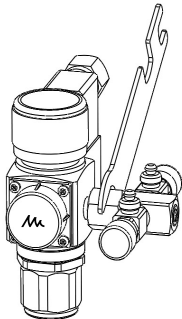

03

Connect the splitter body tightly with the swivel joint by the provided open-end wrench.

**Note:** Make sure to hold the splitter steady in correct orientation when tighten the swivel joint by the wrench, and adjust the outlets of the needle valves vertically upward.

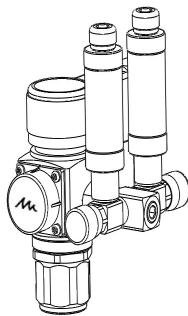

04

### Install the bubble counters

- Screw off the top cover of the bubble counter, fill the acrylic tube with 2/3 water, hand tighten the cover back on firmly. Do not over tighten as you may risk cracking it.
- Screw the bottom nut onto the manifold block needle valve in a clockwise direction, ensure it is firmly sealed.
- Remove the lock nut on the top cover of the bubble counter, place the tube OD6mm x ID 4mm through the lock nut and plug the tube onto the outlet nipple of the top cover, tighten the locknut firmly once done.
- Repeat this procedure to install the other bubble counters;